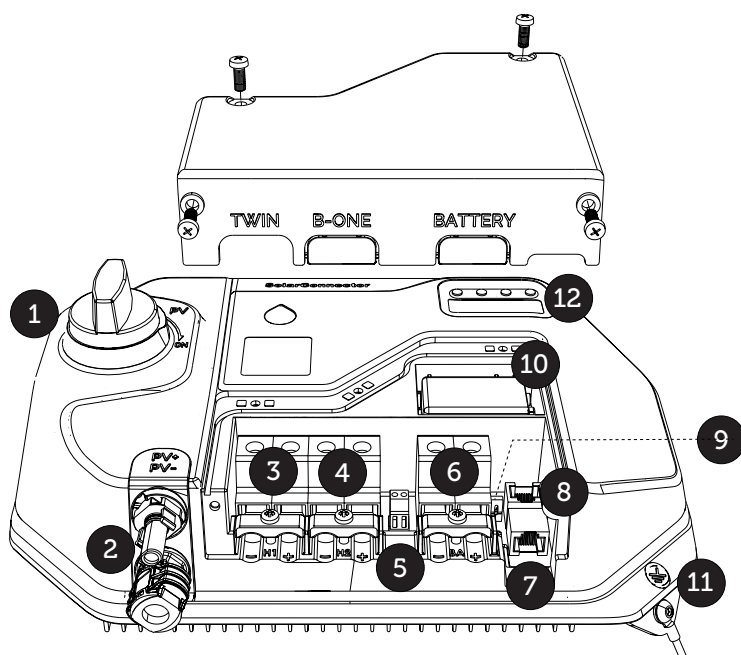
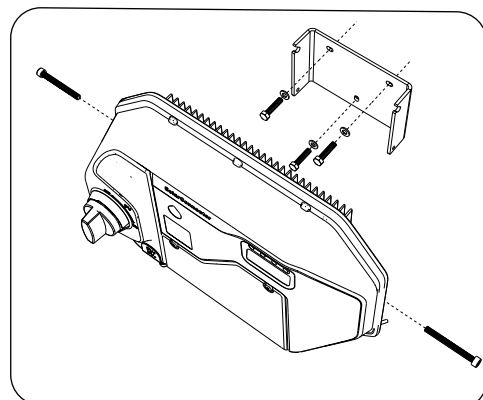
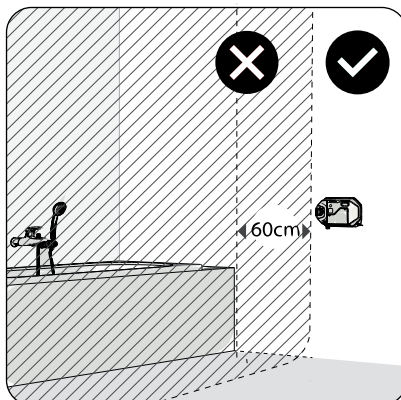
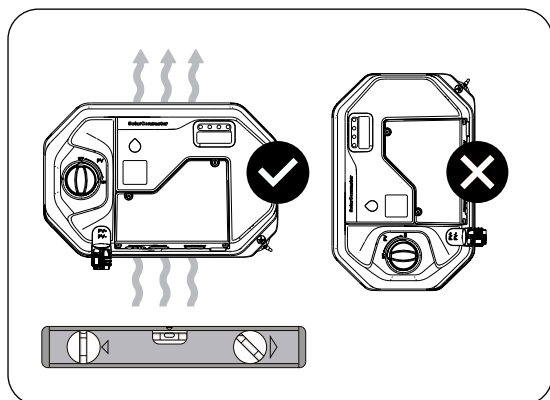


**FR.** La mise à la terre est obligatoire. Raccordez le conducteur de protection à la borne identifiée par le symbole de mise à la terre (⚡).

**NL.** Aarding is verplicht. Sluit de beschermingsgeleider aan op de klem die is gemarkeerd met het aardingssymbool (⚡).

**UK.** Grounding is mandatory. Connect the protective conductor to the terminal marked with the grounding symbol (⚡).

## FR

- 1 Interrupteur principal (ON/OFF)
- 2 Entrée PV (connecteurs MC4)
- 3 Sortie Boiler Twin
- 4 Sortie B-One
- 5 Sortie relais programmable
- 6 Raccordement batterie (±)
- 7 Port RS-485 primaire
- 8 Port RS-485 secondaire
- 9 Sélecteur maître/esclave (jumper)
- 10 Logement ACCU 9v
- 11 Borne de mise à la terre (⚡)
- 12 Témoins d'état

## NL

- 1 Hoofdschakelaar (AAN/UIT)
- 2 PV-ingang (MC4-connectoren)
- 3 Boiler TWIN-uitgang
- 4 B-ONE-uitgang
- 5 Programmeerbare relaisuitgang
- 6 Batterijaansluiting (±)
- 7 Primaire RS-485-poort
- 8 Secundaire RS-485-poort
- 9 Master/slave-selector (jumper)
- 10 ACCU 9V-houder
- 11 Aardingsklem (⚡)
- 12 Statusindicatoren

## UK

- 1 Main switch (ON/OFF)
- 2 PV input (MC4 connectors)
- 3 Boiler TWIN output
- 4 B-ONE output
- 5 Programmable relay output
- 6 Battery connection (±)
- 7 Primary RS-485 port
- 8 Secondary RS-485 port
- 9 Master/slave selector (jumper)
- 10 9V battery slot
- 11 Grounding terminal (⚡)
- 12 Status indicators



Notices, certificats et garanties : [www.wanit.com/documentation](http://www.wanit.com/documentation)

Handleidingen, certificaten en garanties : [www.wanit.com/documentation](http://www.wanit.com/documentation)

Manuals, certificates and warranties : [www.wanit.com/documentation](http://www.wanit.com/documentation)